

Overview

Essential details

Warranty:	2 Year	Place of Origin:	Philippine
Brand Name:	APC-UPS	Model Number:	SYMIM16
Phase:	Three Phase	Protection:	Unbalanced Loads
Type:	On-line	Application:	Computer/networking

Packaging & delivery

Selling Units:	Single item
Single package size:	17.3X45.2X70.5 cm
Single gross weight:	10.000 kg
Package Type:	Package by strong kraft box.
Picture Example:	


Lead time:	Quantity(pieces)	1 - 300	>300
	Lead time (days)	7	To be negotiated

Specifications



Specification

Item	value
Warranty	2 Year
Place of Origin	Philippine
Brand Name	APC-UPS
Model Number	SYMIM16
Phase	Three Phase
Protection	Unbalanced Loads
Type	On-line
Application	Computer/networking
color	Black

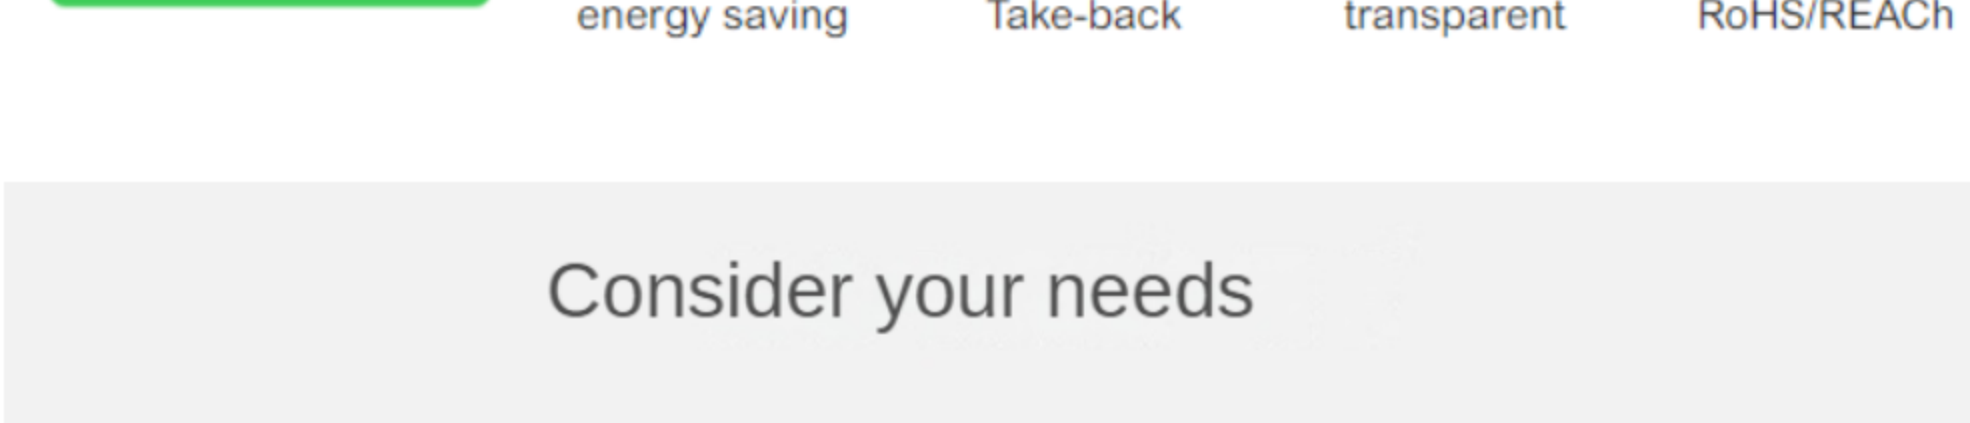

Consider your needs

Anti-power failure

Anti-surge

Voltage stabilization

Anti-electronic interference

Short circuit prevention

Overload protection

Turn off the UPS power supply

Turn off the AC mains power of UPS. Turn off the UPS input circuit breaker.	
Turn off the system enable switch.	

Electrical connection

⚠ Danger

Electric shock danger

- Comply with all national and local specifications.
- Wiring work must be completed by qualified electricians.
- Read and follow all safety and installation instructions in this manual.
- Read and follow all safety and installation instructions in the manual cited in this manual.

Failure to comply with these instructions may lead to equipment damage, personal injury or death.

Symmetra LX 接线

Please refer to the "Symmetra LX Electrical Installation Guide" for input and output power connections.

System installation checklist

Please refer to the "Symmetra LX Hardware Installation Guide" and "Symmetra LX Electrical Installation Guide" for detailed instructions.

Disconnect all devices connected to the UPS. Make sure that all rack mounting components are correctly fixed in the rack. Verify that the power supply module, battery module, and intelligent module are properly installed. Verify that the Power View is connected to the smart module (IM).	
Turn on UP SAC mains power supply. Turn on input circuit breaker and system enable switch.	
Ticking may be heard during initial startup. During initial startup, Power View may display diagnostic messages. These messages can be ignored. Press Esc on the Power View until the monitoring screen is displayed. Confirm that the input voltage (Vin) matches the voltage of the branch circuit (main circuit).	

Turn on the maintenance bypass switch.	
Ignore any LED lights or diagnostic messages on the Power View. Press Esc on the Power View until the monitoring screen is displayed. Confirm input voltage (Vin) matches the voltage of the branch circuit (main circuit). Test the REPO switch. The system enable switch should be moved to the standby position and the system should be turned off. Turn off input circuit breaker, system enable switch and maintenance bypass switch.	

Turn on the UPS system enable switch.	
To start UPS without AC mains power supply, please press and hold any cold start button for four seconds.	

Company Profile

